

CRYOGENIC VALVE DESIGN GUIDE-PEEK POLYMERS

# Designing Cryogenic Valves with PEEK: Key Considerations for Engineers

MESC SPE 77/302 and SPE 77/200  
BY SHELL

**SHELL SPEC**



# Design Challenges – Things to consider when designing a cryogenic valve using PEEK polymers

Cryogenic valves play a critical role in ensuring safe and efficient operation in extremely low-temperature environments, where material performance is paramount. Polyetheretherketone (PEEK) has emerged as a preferred choice for valve components due to its exceptional combination of mechanical strength, chemical resistance, and thermal stability.

\*Victrex will refer to PEEK as CT Polymers in this document.

Unlike traditional fluoropolymers, CT Polymers maintain dimensional integrity and resists brittleness at cryogenic temperatures, making it ideal for demanding applications such as liquefied gas handling.

This guide explores the unique properties of CT Polymers, its advantages over conventional materials, and key considerations for designing reliable cryogenic valves.



# VICTREX CT™ Polymers

VICTREX CT™ polymers offer processors and end-users a tailor-made solution to address the challenges of low-temperature environments.

## VICTREX CT™ 100

High performance thermoplastic material, unreinforced PolyEtherEtherKetone (PEEK), semi crystalline, granules for injection moulding and extrusion. Colour natural.

## VICTREX CT™ 200

High performance thermoplastic PAEK polymer micro-granules for injection and compression moulding and extrusion. Suitable for dynamic sealing applications at very low temperatures. Colour: Green.

**\*VICTREX CT™ polymers meet Shell's Material & Equipment Standards and Code (MESC) for cryogenic ball valves**

[LEARN MORE](#)



# Key Requirements for Cryogenic Sealing Materials

## Cryogenic Valve and Seal Requirements

- ▶ Operate reliably from ambient to -196 °C (or lower)
- ▶ Maintain dimensional stability under thermal cycling
- ▶ Exhibit low permeability to gases
- ▶ Provide low friction and wear resistance for dynamic seals
- ▶ Resist cold flow and creep under load
- ▶ Offer chemical resistance to cryogenic fluids (LNG and LH<sub>2</sub>)
- ▶ Minimise thermal mismatch with metallic components

## Material Comparison Table

Property	VICTREX CT™ 100	VICTREX CT™ 200	PCTFE
<b>Polymer Family</b>	PAEK-based (PEEK derivative)	PAEK-based (PEEK derivative)	Fluoropolymer
<b>Operating Range</b>	-253 °C to +260 °C	-253 °C to +260 °C	-240 °C to +150 °C
<b>Tensile Strength @ -196 °C</b>	High (better than PCTFE)	Higher than CT100 & PCTFE	Moderate
<b>Impact Strength @ -196 °C</b>	High (better than PCTFE)	Higher than CT100 & PCTFE	Moderate
<b>Coefficient of Friction</b>	Moderate	Lower (best for dynamic seals)	Higher (requires more torque)
<b>Thermal Conductivity</b>	Good (better than PCTFE)	Better than CT100 & PCTFE	Low
<b>Coefficient of Thermal Expansion (CTE)</b>	Low, stable	Lower than CT100	Higher
<b>Gas Permeability</b>	Very low	Very low	Extremely low
<b>Chemical Resistance</b>	Excellent	Excellent	Excellent
<b>Wear Resistance</b>	Good	Excellent	Moderate
<b>PFAS Free</b>	Yes	No	No

# Application Guidelines

## Static Seals (Seats, Gaskets)



### Preferred Material: VICTREX CT™ 100

- Outstanding ductility and toughness at -196 °C.
- High compressive strength for tight sealing.



### Alternative: PCTFE

- Historically used for static seals; good dimensional stability but lower toughness.

## Dynamic Seals (Ball Valve Seats, Gaskets)



### Preferred Material: VICTREX CT™ 200

- Lower friction → reduced actuation torque.
- Superior wear resistance and creep resistance.
- Ideal for valves requiring frequent cycling.



### PCTFE Limitation

- Higher friction and lower wear resistance → shorter service life.



# Design Considerations

## Material Behavior at Cryogenic Temperatures

- CT Polymers maintain excellent mechanical properties down to cryogenic temperatures, including high tensile strength and dimensional stability.
- Thermal contraction should be accounted for as this can affect tolerances and sealing interfaces.


## Sealing and Leakage Prevention

- CT Polymers maintain excellent mechanical properties down to cryogenic temperatures, including high tensile strength and dimensional stability.
- Thermal contraction should be accounted for as this can affect tolerances and sealing interfaces.




## Thermal and Chemical Resistance

- CT Polymers offer excellent chemical resistance to cryogenic fluids like liquid nitrogen and hydrogen.
- **Be sure** to confirm chemical compatibility in the operating environment.
- CT Polymers has high thermal conductivity, which helps reduce heat transfer and maintain cryogenic conditions. It also ensures faster temperature equalisation, maintaining seal integrity. **This is important for valves with rapid cycling or emergency shut-off.**
- **Be sure** to confirm thermal cycling stability between ambient and cryogenic temperatures.

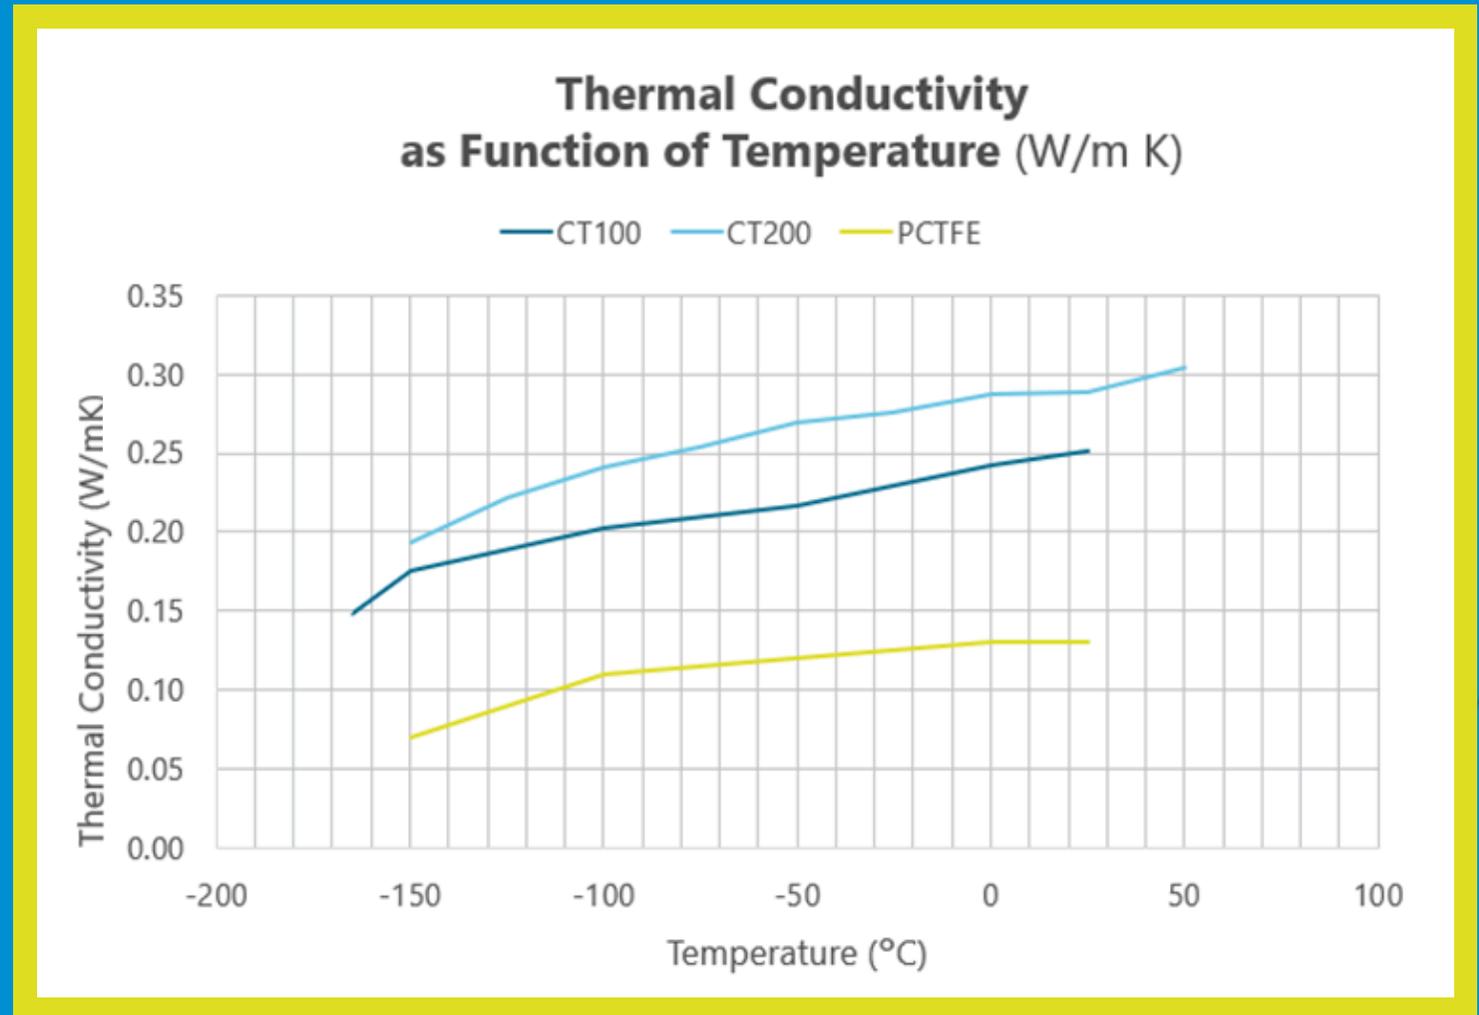

## Structural Design

- The design must accommodate the differential in thermal expansion between CT Polymer and the counter face to avoid stress build up or cracking. This should reduce the shrinkage risk.
- Refer to shrinkage data for CT grades. (see below)
- Perform cryogenic cycling tests to confirm seal integrity.

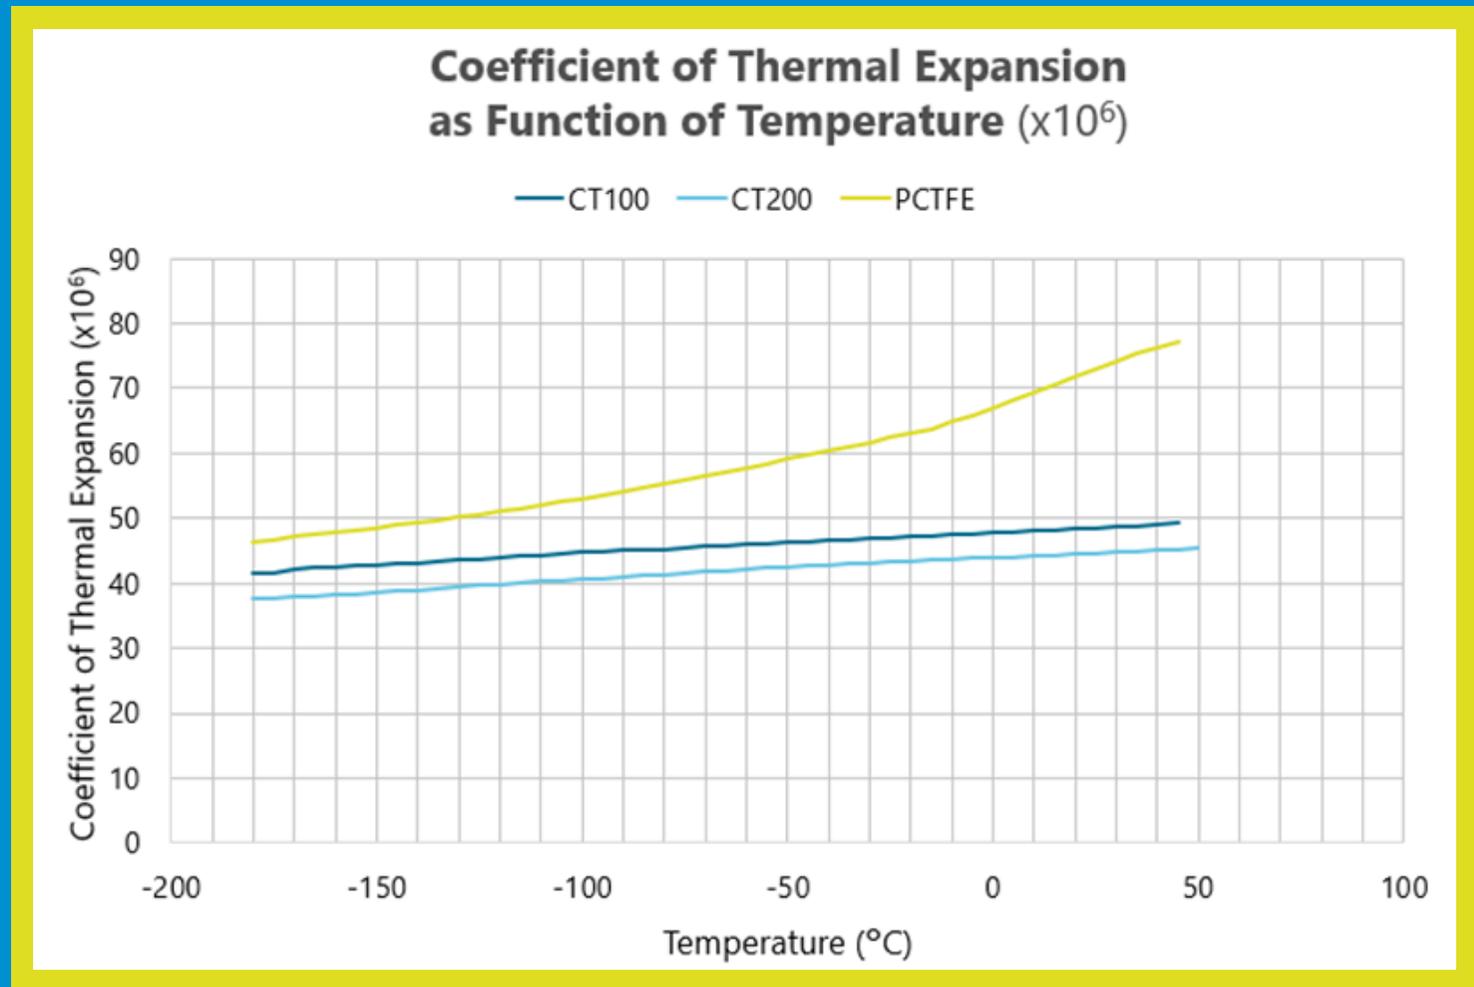

## Mould Shrinkage Data

### VICTREX CT™ 100 Conditions:

ISO 294-4, 395°C nozzle, 185°C tool

Along Flow	0.9%
Across Flow	1.3%

### VICTREX CT™ 200 Conditions:

ISO 294-4, 385°C nozzle, 180°C tool

Along Flow	1.09%
Across Flow	1.50%

## Machineability and Assembly

- CT Polymer has good machinability; care must be taken to avoid introducing stress concentrations or microcracks during fabrication. Avoid sharp corners; use generous radii to reduce stress concentration.
- Precision machining is recommended for CT Polymer.
- Surface Finish: Ensure smooth metallic counter faces to minimise wear.
- Anneal after machining to relieve stress and improve dimensional stability.
- Ensure clean, dry assembly to prevent contamination in cryogenic service.

## Standards and Compliance

- Refer to standards like Shell MESC SPE 77/200 and 77/302.
- Ensure compliance with industry specific safety and performance regulations, especially in hydrogen or LNG applications
- Always verify material performance in application conditions.



# Partner with Victrex for Your Cryogenic Applications

Contact our experts to discuss the benefits of **VICTREX CT™ Polymers**. Learn how they can help address challenges and improve sealing performance in harsh environments.

## Ready to Advance Your Cryogenic Applications?

[Contact Us](#)



# A WORLD LEADER IN PEEK AND PAEK POLYMER SOLUTIONS

Victrex is an innovative world leader in high performance polymer solutions, focused on the strategic markets of automotive, aerospace, energy (including manufacturing & engineering), electronics and medical. Every day, millions of people use products and applications, which contain our materials – from smart phones, aeroplanes and cars to oil and gas operations and medical devices. With over 40 years' experience, we develop world leading solutions in PEEK and PAEK-based polymers, semi-finished and finished parts which shape future performance for our customers and our markets, and drive value for our shareholders. Find out more at [www.victrex.com](http://www.victrex.com)

## WORLD HEADQUARTERS

### Victrex plc

Hillhouse International  
Thornton Cleveleys  
Lancashire FY5 4QD  
United Kingdom  
TEL + (44) 1253 897700

## AMERICAS

### Victrex USA Inc

300 Conshohocken State  
Road Suite 120 West  
Conshohocken,  
PA 19428 USA  
TEL + (1) 800-VICTREX  
TEL + (1) 484 342 6001

## EUROPE

### Victrex Europa GmbH

Langgasse 16  
65719 Hofheim/Ts.  
Germany  
TEL + (49) 6192 96490

## JAPAN

### Victrex Japan, Inc.

Mita Kokusai Building  
Annex 4-28, Mita 1-chome  
Minato-ku  
Tokyo 108-0073  
Japan  
TEL + 81 (0)3 5427 4650

## CHINA

### Victrex High-Performance Materials (Shanghai) Co Ltd

Part B Building G  
No. 1688 Zhuanxing Road  
Xinzhuan Industry Park  
Shanghai 201108  
China  
TEL + (86) 21 6113 6900

## SOUTH KOREA

### Victrex Korea

14th floor Superior Tower  
528, Teheran-ro  
Gangnam-gu  
Seoul 06181  
Korea  
TEL +(82) 2 2182 1200



Victrex plc and/or its group companies ("Victrex plc") believes that the information contained in this document is an accurate description of the typical characteristics and/or uses of the product or products, but it is the customer's responsibility to thoroughly test the product in each specific application to determine its performance, efficacy, and safety for each end-use product, device or other application. Suggestions of uses should not be taken as inducements to infringe any particular patent. The information and data contained herein are based on information we believe reliable. Mention of a product in this document is not a guarantee of availability. Victrex plc reserves the right to modify products, specifications and/or packaging as part of a continuous program of product development. Victrex plc makes no warranties, express or implied, including, without limitation, a warranty of fitness for a particular purpose or of intellectual property non-infringement, including, but not limited to patent non-infringement, which are expressly disclaimed, whether express or implied, in fact or by law. Further, Victrex plc makes no warranty to your customers or agents, and has not authorised anyone to make any representation or warranty other than as provided above. Victrex plc shall in no event be liable for any general, indirect, special, consequential, punitive, incidental or similar damages, including without limitation, damages for harm to business, lost profits or lost savings, even if Victrex has been advised of the possibility of such damages regardless of the form of action. INVIBIO™, PEEK-OPTIMA™, INVIBIO BIOMATERIAL SOLUTIONS™ are trademarks of Victrex plc or its group companies. VICTREX™ and the Triangle (Device), are trade marks of Victrex plc or its group companies

